



A NORTH WEST RUBBER COMPANY

BIG MOMMA


Installation Guidelines

Installation Materials:

a) Big Momma mattresses

b) Tools

- Sharp utility knife & spare blade
- Carpenter square & straight edge
- Measuring tape
- Chalk line (for layout)
- Markers (to indicate cut lines)
- Cut-resistant gloves
- Safety glasses
- Drill
- Corresponding drill bits
- 3" concrete anchors
- 1/4" fender washers
- Hammer

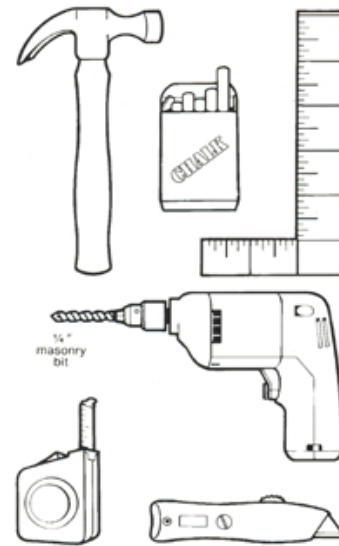

1

Prior to the installation, dispose of old mattresses and thoroughly clean the platform. Address any concrete damage by conducting repairs before proceeding with the installation of the Big Momma.



BIG MOMMA

2

Trim the Big Momma to the specified length to align with the rear curb/gutter edge without any overhang. Trim the pads as needed; they are intended to be customized. In case the stalls exceed 72 inches in length, maintain consistent spacing at the curb/gutter end while allowing any gap to occur at the front of the stall.

3

Place the pads on the deck, ensuring a snug fit by aligning them closely against each other along the length of the platform.

4

Trim around any posts present on the platform, leaving a slight clearance gap around each post.



5

Place up to 5 pins along each long side and one in the middle of the top and bottom of the short sides. Ensure you secure anchoring through the solid ribs of the mat. Preserve a one-inch gap at the rear of the stall. Consult Figure 1 and Figure 2 for recommended patterns.

Figure 1


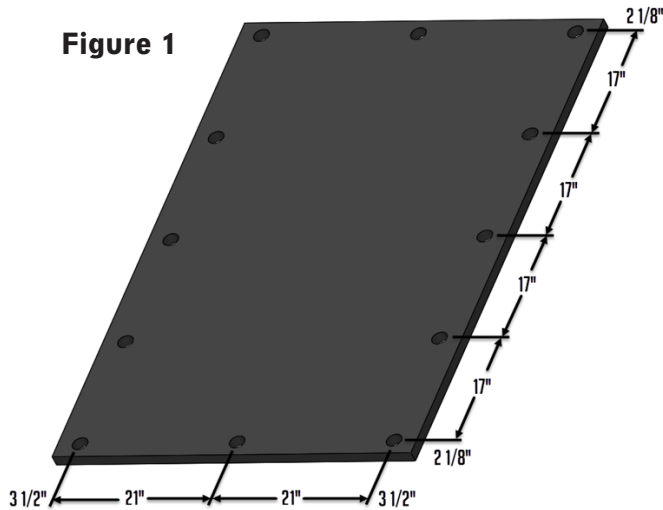


Figure 2



Additional Information:

1. The Big Momma is available in optional lengths upon ordering. The installation procedure remains the same regardless.
2. Custom-cutting of mats is possible on special order. However, the installation procedure remains consistent regardless.
3. Washers are essential to prevent pins from pulling through mats.
4. Maintain the 1-inch gap for a free stall installation.

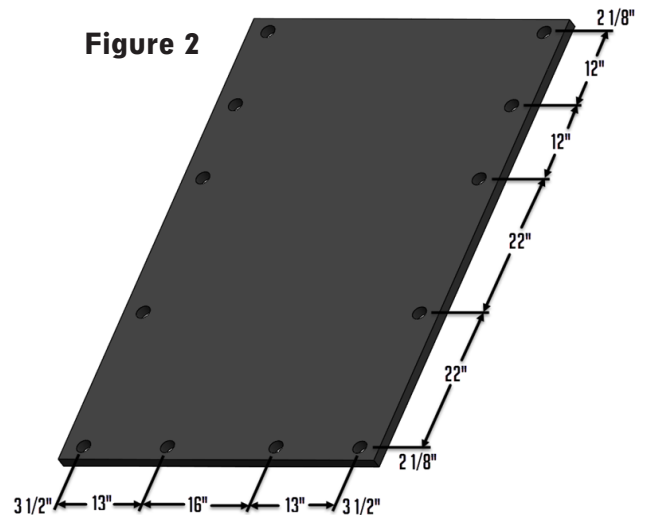

Animat
819-821-2091
395 rodolphe-Racine
Sherbrooke Qc,
Canada